

# ROOT FLOW™ TARGET WATERING, AERATION AND NUTRIENT TUBE

## NEWLY PLANTED TREES ROOT FLOW INSTALLATION INSTRUCTIONS

For tree trunks 1 to 3 inches in diameter gently install Root Flow model RF-S directly into the root mass, a few inches inside the outer edge, one on each side of the trunk as shown. Next install 2 to 3 Root Flow model RF-L, evenly spaced 4 to 6" outside of the root mass. This installation pattern will provide newly planted trees with an immediate root water and aeration benefit while encouraging the roots to grow outward into the surrounding soil.



Root Flow tubes are easily installed by starting a hole with the use of a screw driver 4 to 5" deep. With the screw driver in the soil, move the handle in a circular motion to loosen the dirt. Place the Root Flow tube in the hole and hammer it into the soil until the top is level to grade

## EXISTING TREE INSTALLATION



For shrubs & plants install  
Root Flow model RF-S



Install around the drip edge of  
the tree leaf canopy 3' apart

Always consult with your local tree care expert for proper watering and tree care advice.